


Fixing Stained or Bare Weatherboards with Packer Cavity Battens

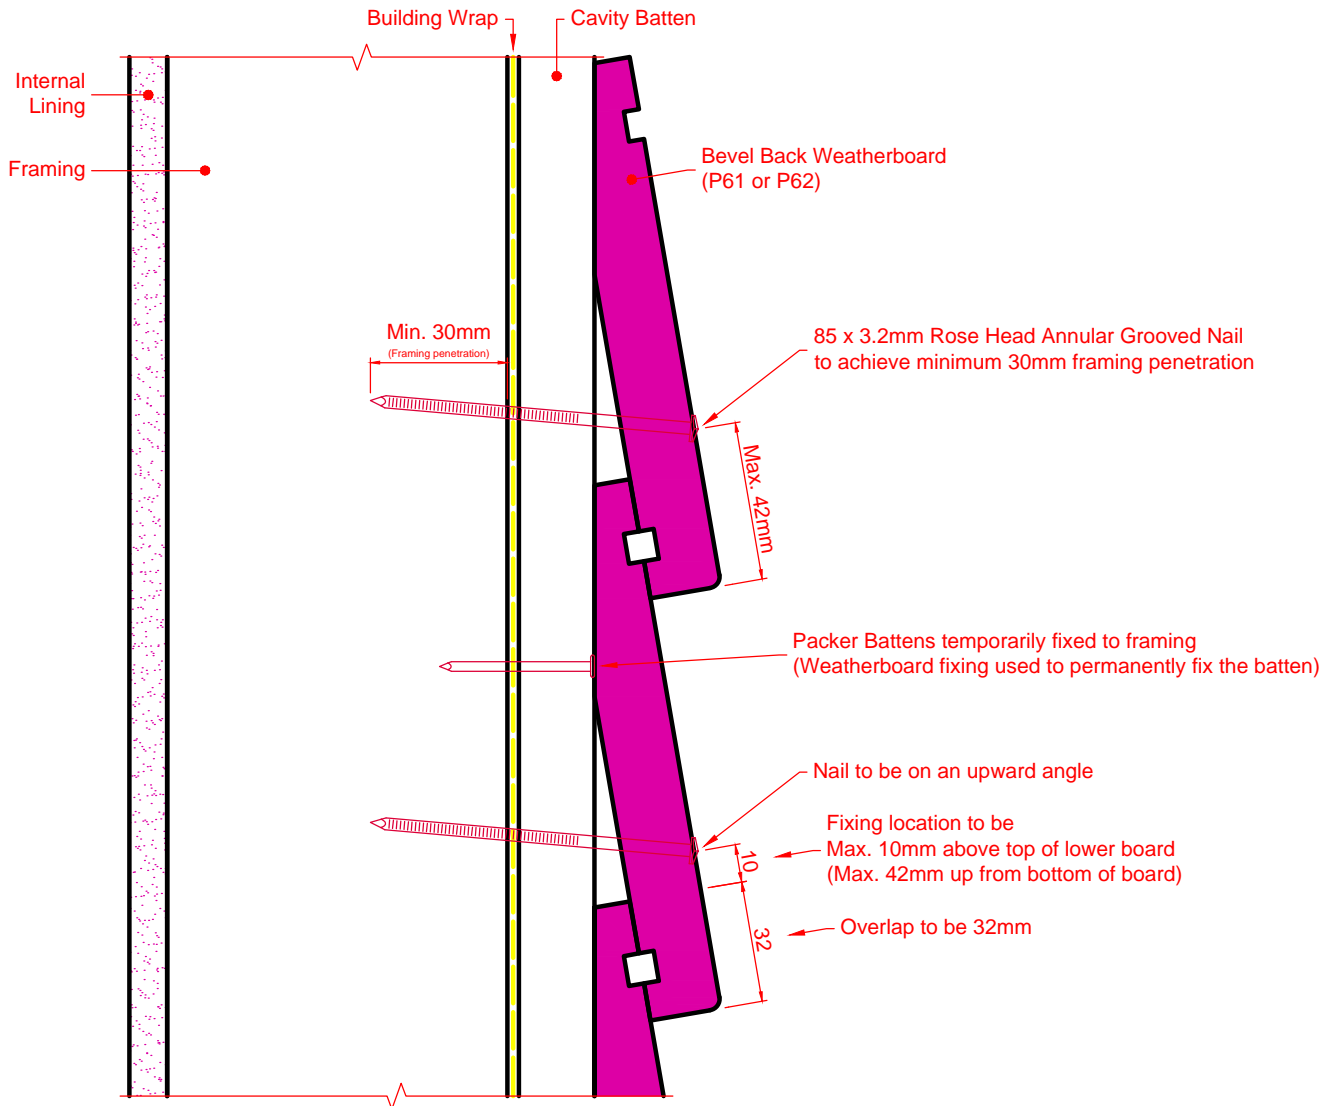

Note: Refer to the Bevel Back Cavity System Installation Manual for full details