


Fixing Details - Stained/bare Weatherboards with Packer Cavity Battens

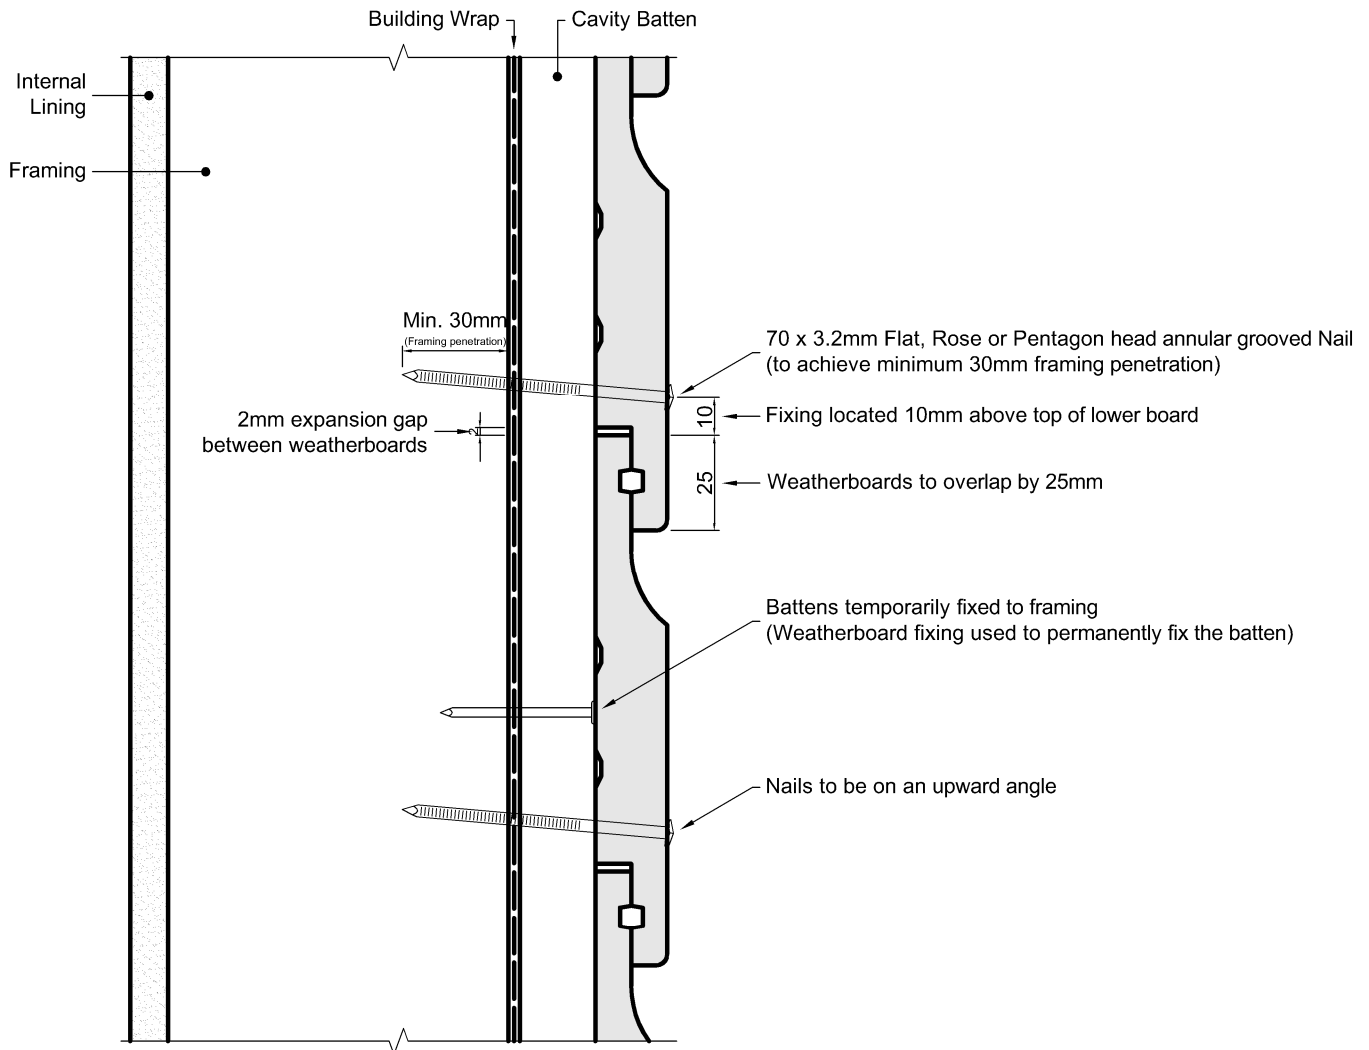

Note: Refer to the Rusticated Cavity System Installation Manual for full details