


# Fixing Painted Weatherboards with Packer Cavity Battens

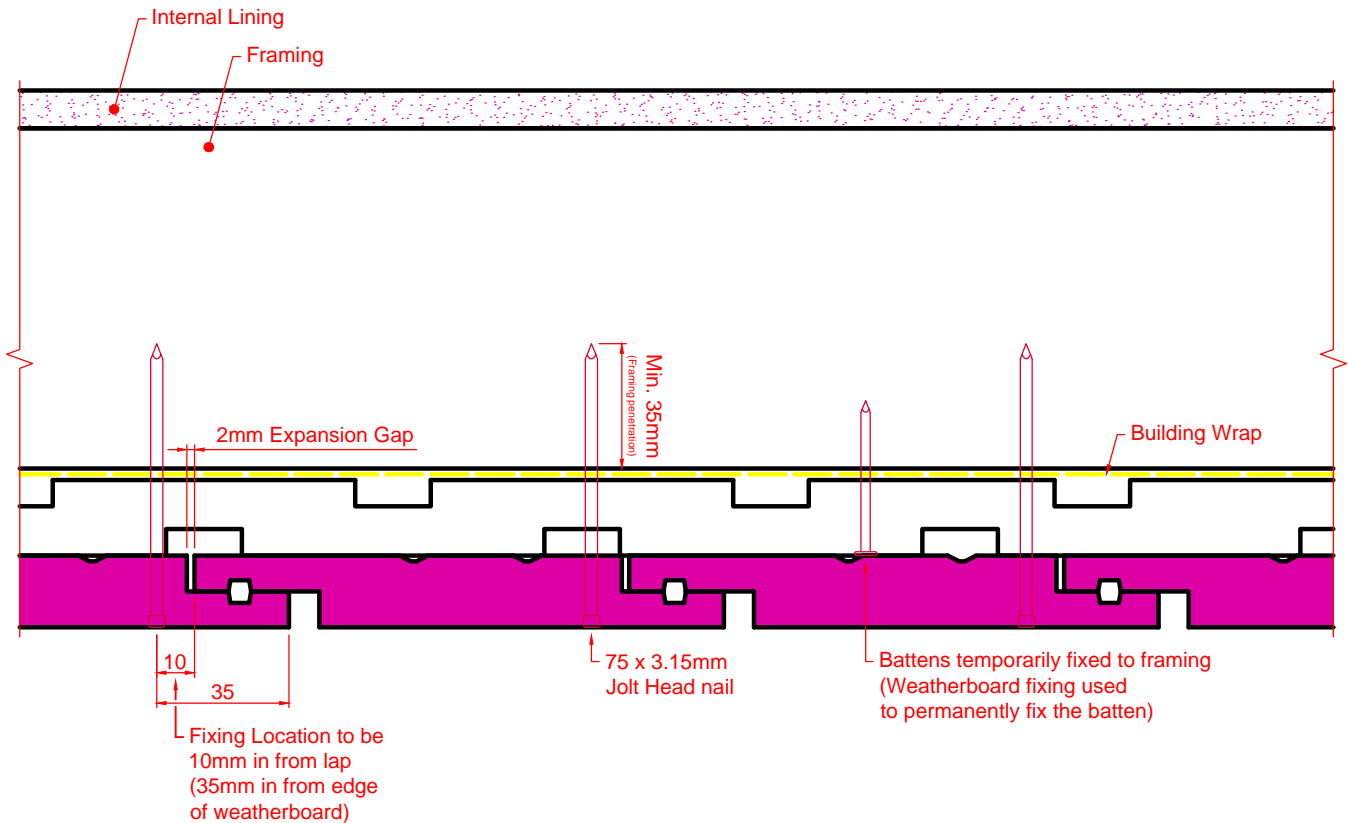

Note: Nails are to be on an upward angle to prevent water running down the nail through the cavity

Note: Refer to the Vertical Shiplap Cavity System Installation Manual for full details