


Fixing Stained Weatherboards with Packer Cavity Battens

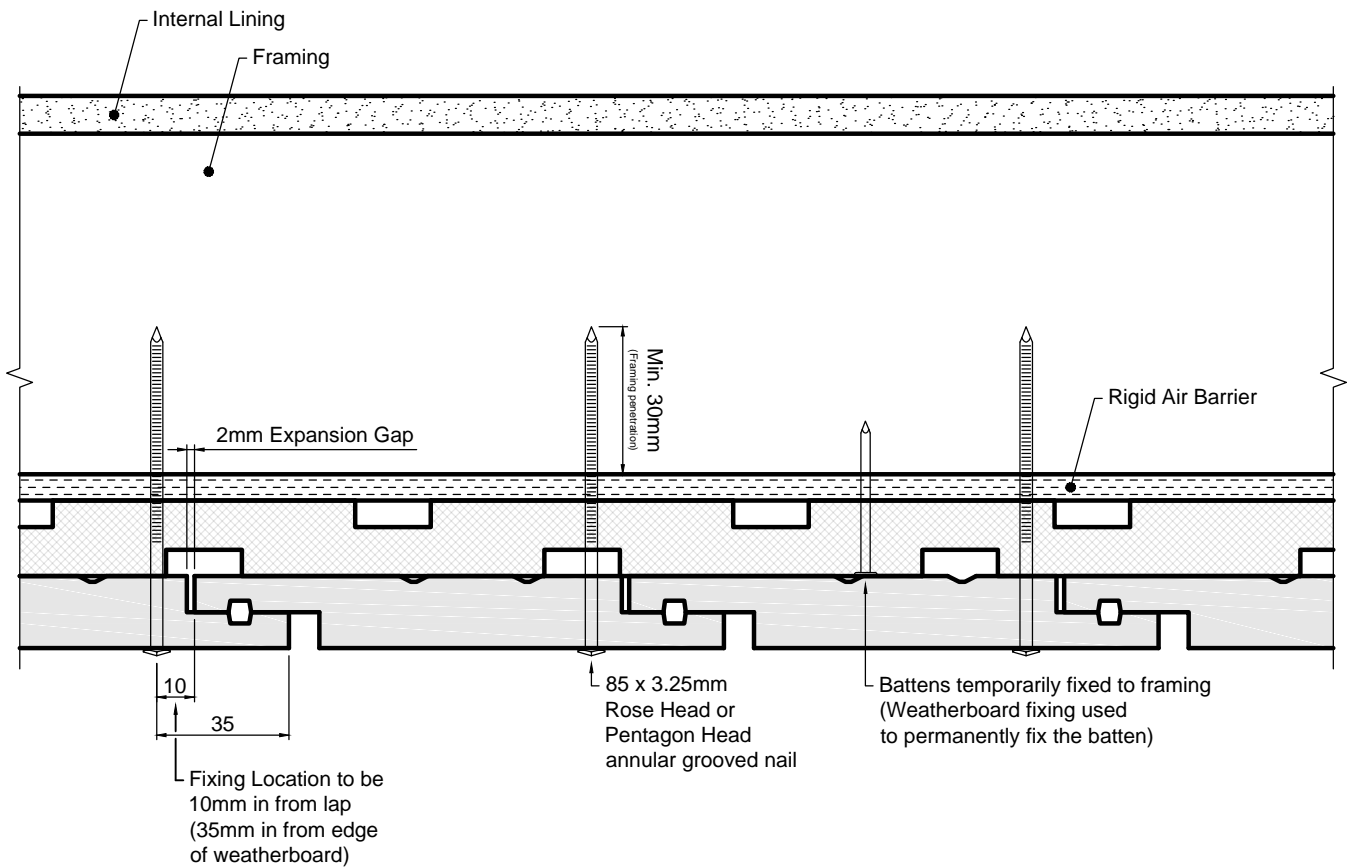

Note: Nails are to be on an upward angle to prevent water running down the nail through the cavity

Note: Refer to the Vertical Shiplap Cavity System with Rigid Air Barrier Installation Manual for full details